


STEEL SECURITY SAFE COFFRE-FORT DE SÉCURITÉ EN ACIER CAJA DE SEGURIDAD DE ACERO

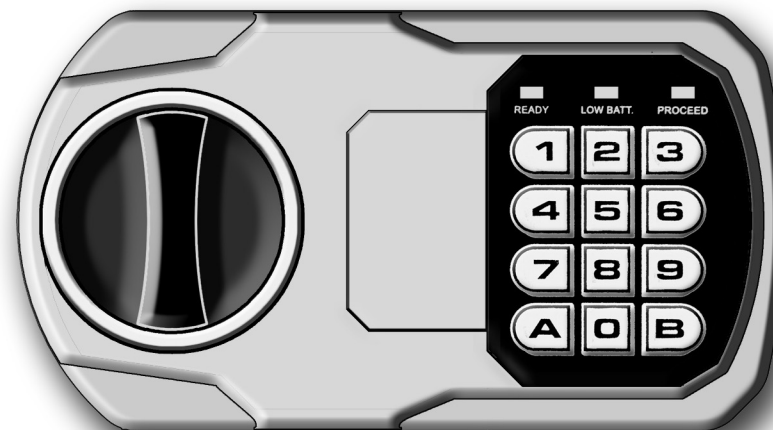

The Honeywell trademark is used under license from Honeywell International inc. Honeywell International inc. makes no representations or warranties with respect to this product.

La marque déposée Honeywell est utilisée avec autorisation d'Honeywell International Inc. Honeywell international Inc. ne fait aucune affirmation et n'offre aucune garantie au sujet de ce produit.

La marca Honeywell se usa bajo licencia otorgada por Honeywell International Inc. Honeywell International Inc. no hace ningún tipo de representación ni garantía con respecto a este producto.

Read this manual carefully and never store it inside the safe!
Read this manual carefully and never store it inside the safe!
Read this manual carefully and never store it inside the safe!

Steel Security Safe with Digital Lock

PACKAGE CONTENTS


- 1 – Steel Security Safe
- 1 – Operation Manual
- 2 – Override Access Keys
- 4 – “AA” Batteries
- 1 – Mounting Kit w/ Bolts

DO NOT RETURN SAFE TO STORE!

If there are any missing parts or you have difficulty setting up or operating your safe, please contact our Consumer Assistance Department by telephone:

1-877-354-5457
(USA & Canada)
Monday–Friday
7am - 5pm PST

PRODUCT OVERVIEW

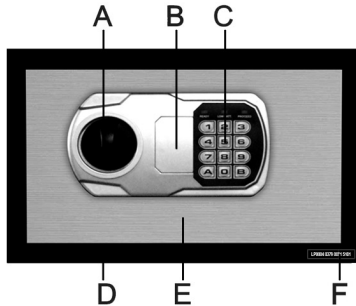


- A - Safe Entry Knob
- B - Override Key Cover
- C - Electronic Digital Keypad
- D - Safe Cabinet Body
- E - Safe Door Assembly
- F - Serial Number Label

IMPORTANT: Remove plastic corners from outside of safe door before operating.

SETUP


STEP 1. OPEN SAFE WITH OVERRIDE KEY

1. Remove override key cover with small screwdriver.
2. Insert override key and turn left to unlock safe.
3. Turn knob to right and open safe door.

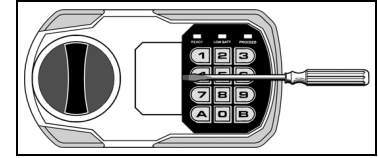

STEP 2. INSTALL BATTERIES

1. Remove battery compartment (A) cover on inside door.
2. Insert 4 “AA” batteries (included).
3. Replace the battery cover.
4. Do not close door before testing digital lock.

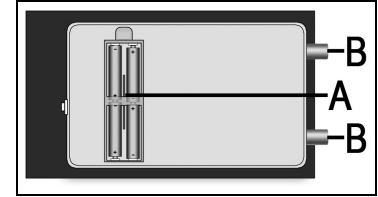


STEP 3. TEST DIGITAL LOCK

1. With door open, turn knob left to put locking door bolts (B) in lock position.
2. Remove override key and store in a secure place. **NEVER STORE KEYS INSIDE SAFE!**
3. Enter the preset pass code: “1”-“5”-“9”-“b” .
4. Turn knob to right within 5 seconds.
5. Lock bolts should recede into the unlocked position.

STEP 4. PROGRAM A NEW PASSCODE

1. With door open, press red reset button (C) inside door.
2. Yellow light is on, enter new pass code in 30 seconds.
3. Enter personal code (3 to 8 digits) followed by “A” or “B”.
4. Safe will beep and yellow light will turn off.

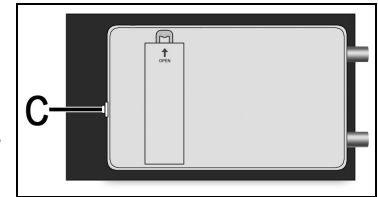


NOTE: The factory pre-set code will not work after a new pass code is programmed.

OPERATION


TO OPEN THE SAFE

1. To unlock and open safe, enter the pass code followed by “A” or “B”.
2. Turn door entry knob to the right and open door.

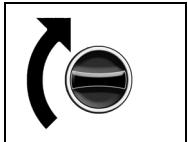

TO CLOSE THE SAFE

1. Close the door and hold it in the closed position.
2. Turn door entry knob to left to engage the lock bolts and lock safe.

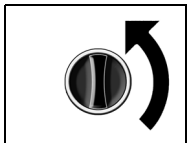

SECURE LOCKOUT PERIODS

If a wrong code is entered three times in a row, the digital keypad will begin a five-minute secure lockout period. During this secure lockout period the keypad will become disabled. Once the lockout period has expired, the safe can be unlocked using the correct pass code. You may use the override key to open safe, but keypad complete the full lockout period.

OVERRIDE ACCESS KEY

If the pass code is unavailable or your keypad fails due to dead batteries or other malfunction, you can open the safe using the override access key (see STEP 1. in the SETUP section).

REPLACING BATTERIES


Note: The pass code will not be erased if the batteries become weak or are removed.

To replace the batteries please follow the instructions in STEP 2. in the SETUP section. If your batteries are completely dead and you cannot open the safe by using the digital keypad, use the override access key to open safe and access the battery compartment.

NOTE: It is NOT RECOMMENDED to use Non-alkaline or rechargeable batteries.

IF YOU FORGET THE PASSCODE

1. Use the override access key to open safe.
2. With door open, press red reset button (C) inside door.
3. Yellow light is on, enter new pass code in 30 seconds.
4. Enter pass code (3 to 8 digits) followed by "A" or "B".
5. Safe will beep and yellow light will turn off.

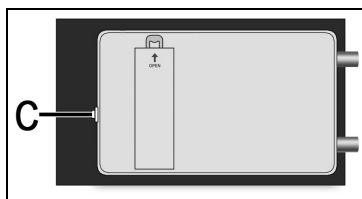

SAFE SERIAL NUMBER

Whenever contacting our Consumer Assistance Department, you will need to provide the them with the serial number of your safe. The serial number tag is located on the lower right corner on the front of the safe.



IMPORTANT: Do Not Remove Tags! This is needed if your safe fails or you lose your keys.

ORDERING NEW KEYS

If a key is lost or you would like additional keys, contact our Consumer Assistance Department.

You will need to provide the following information:

- Safe Serial Number
- Number of keys requested
- Name / Address / Telephone
- E-mail address if available

To order by Mail, send above information with a check or money order for \$12.00 (U.S. funds) to:

Consumer Assistance Dept.
LH Licensed Products, Inc.,
860 East Sandhill Avenue,
Carson, CA 90746 USA

To order keys by telephone, call us toll-free at:

1-877-354-5457
(USA & Canada)
Monday–Friday
7am - 5pm PST

We do accept Visa and MasterCard payments for orders received by telephone.

Express Delivery available for additional charge. Subject to change without prior notification.

CONSUMER ASSISTANCE

Contact us by mail at the following address:

Consumer Assistance Dept.
LH Licensed Products, Inc.,
860 East Sandhill Avenue,
Carson, CA 90746 USA

Contact us by telephone (toll-free) at:

1-877-354-5457
(USA & Canada)
Monday–Friday
7am - 5pm PST

MOUNTING KIT

You may bolt your safe to the wall or floor to added theft protection and resistance to tipping. Your safe has pre-drilled bolt-down holes in the back panel and in the floor.

To secure your safe to the wall and/or floor:

1. Select a suitable and convenient location for your safe.
2. Empty the safe and remove the carpet.
3. Locate the predrilled holes on the inside of safe.
4. Place your safe in the desired location.
5. Line up the predrilled holes and mark the floor or wall through the holes.
NOTE: It is not recommended to attempt to bolt to both floor and wall.
6. Move the safe aside to clear marked spots for drilling.
7. Drill holes appropriate for hardware being used and the mounting surface.
INCLUDED: (2 each – bolts, washers and masonry anchors).
8. Place the safe back over the holes and install the fasteners as required.
9. Once completed, replace the carpet.

NOTE: Bolting/unbolting of the unit is at the consumer's expense and discretion. LH Licensed Products is not responsible for any costs incurred if the unit is to be replaced.

If you have questions about mounting the safe check with your local retailer or contractor.

LIMITED WARRANTY

LH Licensed Products, Inc., ("LHLP, Inc.") warrants that for a period of seven (7) years from the date of purchase, this product will be free from structural or mechanical defects resulting from materials or workmanship. LHLP, Inc., at its sole option and as the purchaser's sole remedy under this warranty, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. THIS IS YOUR EXCLUSIVE WARRANTY.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

LHLP, Inc. dealers, service centers, or retail stores selling this product do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than LHLP, Inc. or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

LHLP, Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty or otherwise relating to the sale of this product. LHLP, Inc. is also not responsible for: costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND LHLP, INC. DISCLAIMS ANY AND ALL OTHER COVENANTS AND WARRANTIES.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.